

# ADVANTAGE<sup>®</sup> 100/200/420/1000/4200 Facepiece Adapter Kit

part no.  
809999

## for use with MSA Comfo<sup>®</sup> Cartridges instructions for use


### Purpose

Installation of this kit permits the use of Comfo Cartridges and/or filters on an Advantage 100/200/420/1000/4200 Facepieces. This kit includes:

- 2 receptacles
- 2 lock rings (optional use)
- 2 cartridge gaskets
- 1 instruction sheet


### Receptacle Attachment

1. Align the cutouts on the cartridge receptacle body with the lugs on the facepiece connectors. Align the small lug on the connector with the match-mark located on the receptacle body. Push down and tighten receptacle clockwise until stops are engaged (approximately 30 degrees).

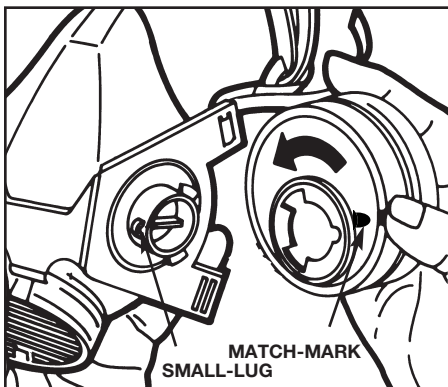

### Lock Ring Attachment

2. Align the lock ring arrow with the arrow inside the receptacle body, then push the lock ring down, snapping it into place.
3. The lock ring helps prevent rotation of the receptacle during cartridge replacement.
4. To remove the lock ring, lift the tab.

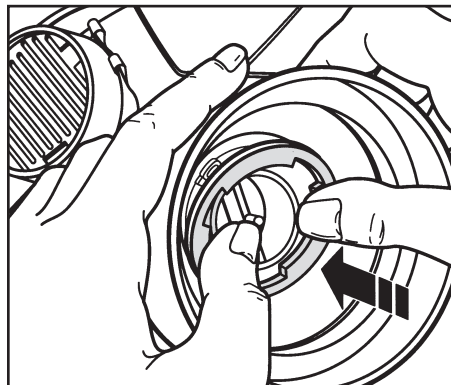

### Preparations for Use

The following inspection points, in addition to those in the respirator instructions, must be checked before donning the respirator. A respirator that fails the inspection must not be used. The respirator must be repaired or replaced.

5. Receptacles: Check to make sure the gaskets are in place. Check for cracks or damage to threads. Be sure the receptacle is securely tightened to the facepiece.
6. Lock Ring: If using the lock ring, check the lock ring for cracks or other damage. Insure the lock ring is properly installed.

### Cartridge Attachment

7. Thread the Comfo Cartridge into the adapter and hand tighten by gripping as much of the circumference of the receptacle as possible and then slowly turning the cartridge until tight.
8. Reverse the procedure for cartridge removal. Be sure to grip the circumference of the receptacle during removal.

### Respirator Use

Use strictly in accordance with these instructions and the instructions provided with ADVANTAGE 100/200/420/1000/4200 Respirators or Respirator Facepieces. For Additional Information Call: 1-800-MSA-2222 during regular working hours. 1-800-MSA-5555 after working hours.

For More Information, call 1-800-MSA-2222 or Visit Our Website at [www.MSAnet.com](http://www.MSAnet.com)



**MINE SAFETY APPLIANCES COMPANY**  
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230